



Correct fastening of loads





B 161-1

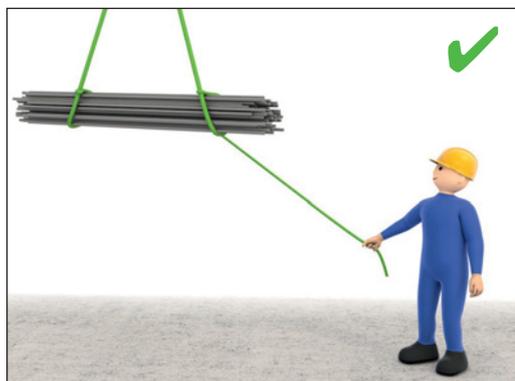


Transport loads in a suspended sling

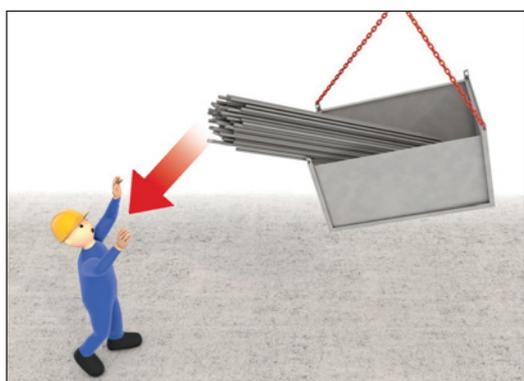

Use quadruple hangers

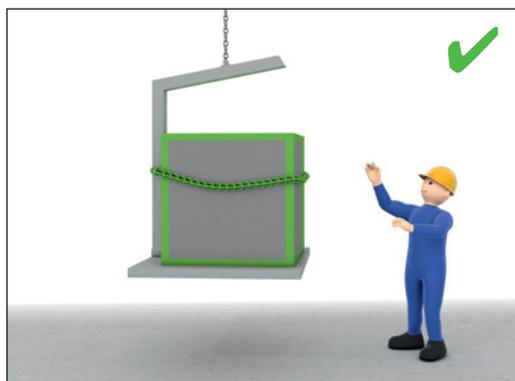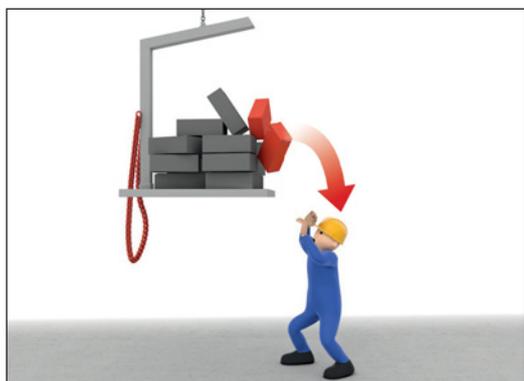

Secure the load against falling

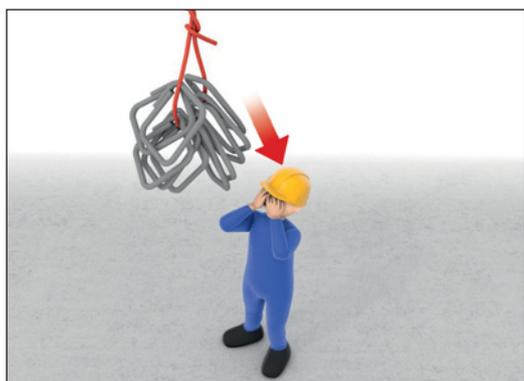

Do not fasten onto the wire